

Manual Step Attenuator




- ◆ DC to 5.8GHz
- ◆ 0 to 90 in 10dB Step
- ◆ 2 Watt
- ◆ Connector Type: SMA,N,TNC,F,BNC etc. available

Features

- Using advanced microstrip technology, ultra-small size
- Attenuation values are adjustable in a power-on state, no sudden big reflection.
It adopts an innovative technology, and thus it eliminates sudden big reflection in attenuators when attenuation is being adjusted, preventing the preliminary RF circuit from being burnt, and keeping the system stable
- Stepvalues 10dB,10dB,10dB,10dB,10dB,10dB,10dB,10dB,10dB,10dB
- 10 attenuation values
- High attenuation accuracy, low insertion loss
- High adjustment accuracy
- Low cost – High Performance
- Adjusting the transmitting (receiving) distance of RF signal precisely. Adjusting accuracy is limited to 5cm.
- Switch repeatability avg.> 10000 operations (5000 cycles) per switch.
- PC(Polycarbonate) Switch, operating temperature of 120°C is available.
- Attenuation values are adjustable in a power-on state, test data can be read continuously, no interruption.

Characteristic

For example the testing curves of VAS079010S2 of 90dB

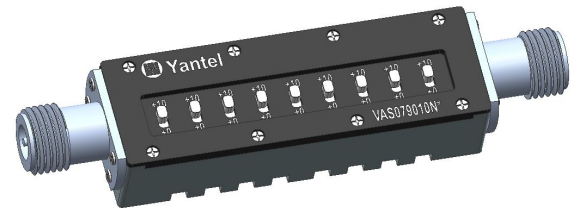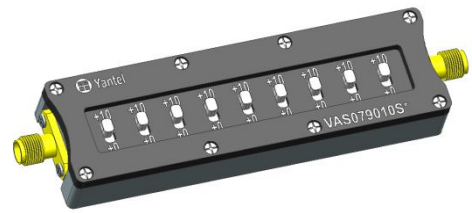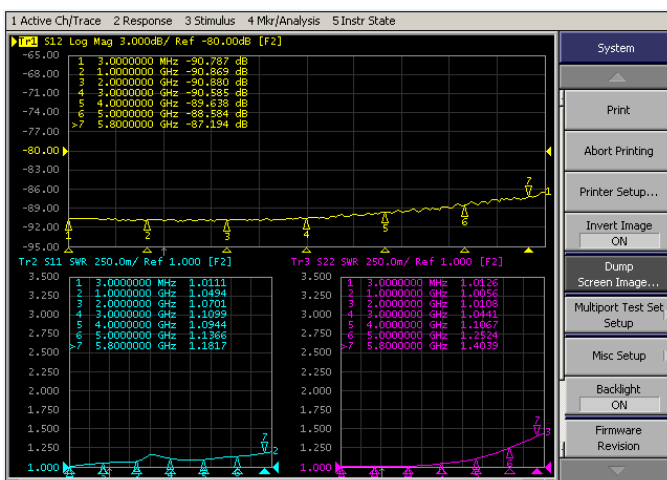

Specifications

Frequency Range	DC to 5.8GHz
Attenuation	0 to 90dB
Step Value	10dB
Insertion loss at 0dB (typ.)	3.0dB in DC to 4GHz 4.6dB in 4GHz to 5GHz 5.5dB in 5GHz to 5.8GHz

Attenuation Accuracy (typ.)

0dB~3.0dB in DC to 4GHz
-2.5dB~4dB in 4GHz to 5GHz
±5.0dB in 5GHz to 5.8GHz

Nominal Impedance	50 Ohm
Average Power	2 Watt
Operating Temperature	-40°C to +85°C

Freq. Range (GHz)	VSWR(:1)	
	Typ.	Max.
DC to 4	1.1	1.35
4 to 5.8	1.25	1.55

Model No. Description

VAS ** ** ** * * *
 Type Attenuation Range Step Value Connector Type Max. Power Connector Option

VAS: Step Variable Attenuator

Type: 07 represents type number

Attenuation Range: Maximum attenuation.

Connector Type: S and N available. S is SMA and N is N type connector.

Max. Power: 2 and 5 are available, currently 2W and 5W are available.


Connector Options:

Options	IO
1	Female/Female
2	Male/Female
3	Male/Male

Connector Position: "A" represents back connectors, without "A" represents left and right connectors.

Package Outlines

S-type Connector Unit:mm(inch)

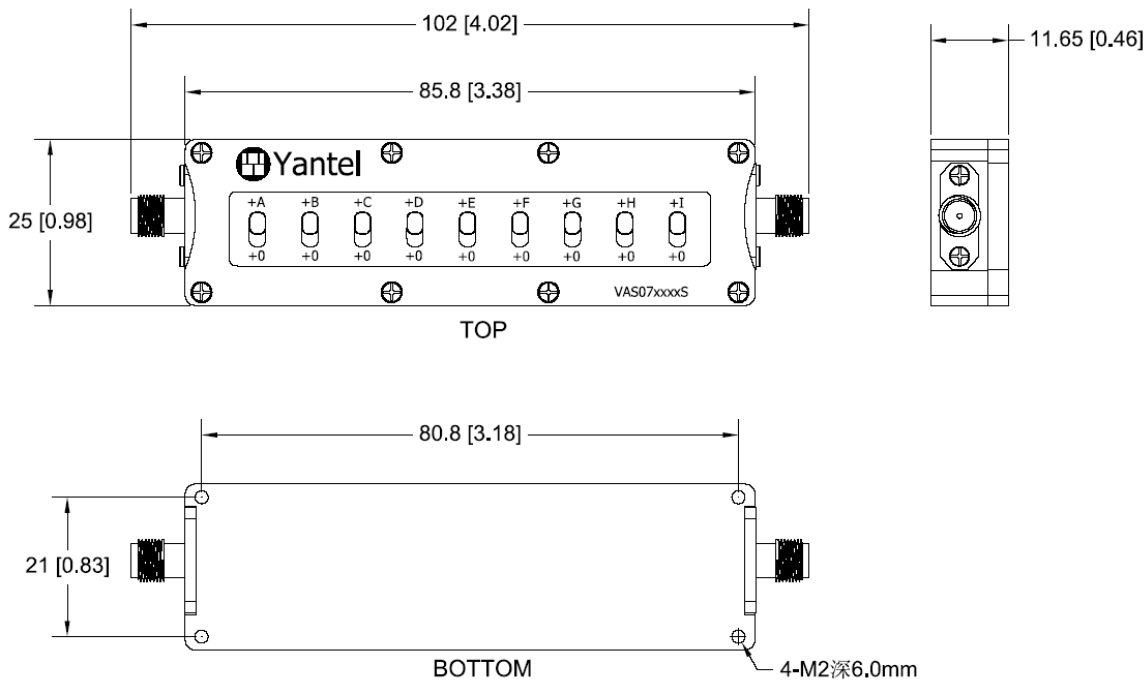


Package type: S21

Yantel Corporation

Add: 3F, Building 3, Southern District 2 of ZhongGuan Honghualing Industrial Park, Xili, Nanshan, Shenzhen, China


Tel: 86-755-8355-1886 Fax: 86-755-8355-2533

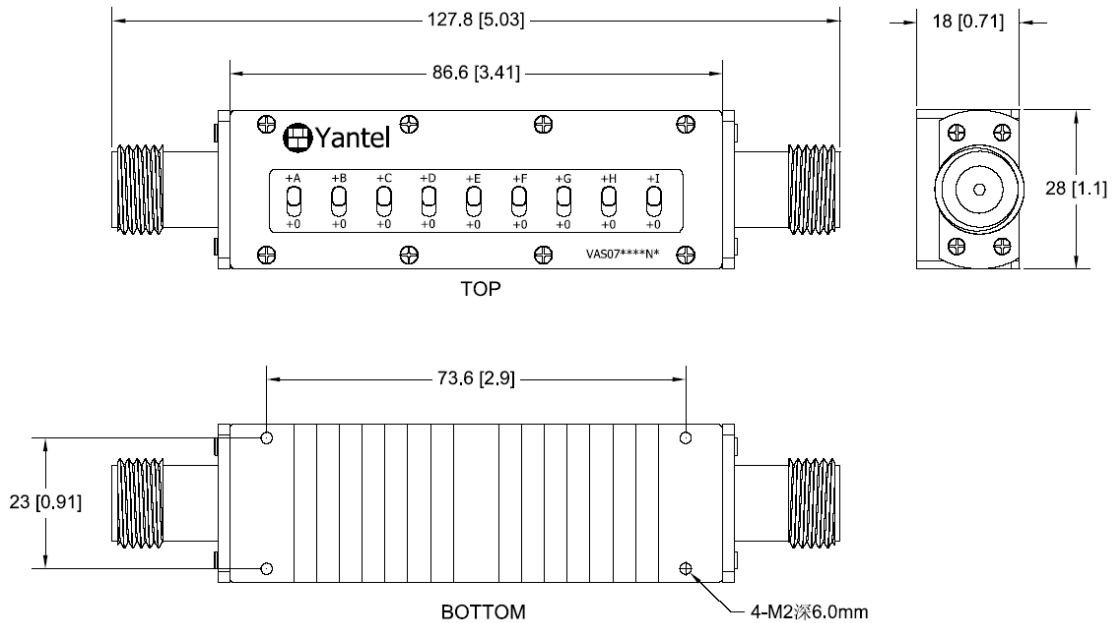N-type Connector


Package type: N21

NOTE:

1. ALL dimensions shown in mm(tolerance: +/-0.2mm) unless stated otherwise
2. RoHS Compliant in accordance with EU Directive(2011/65/EU)

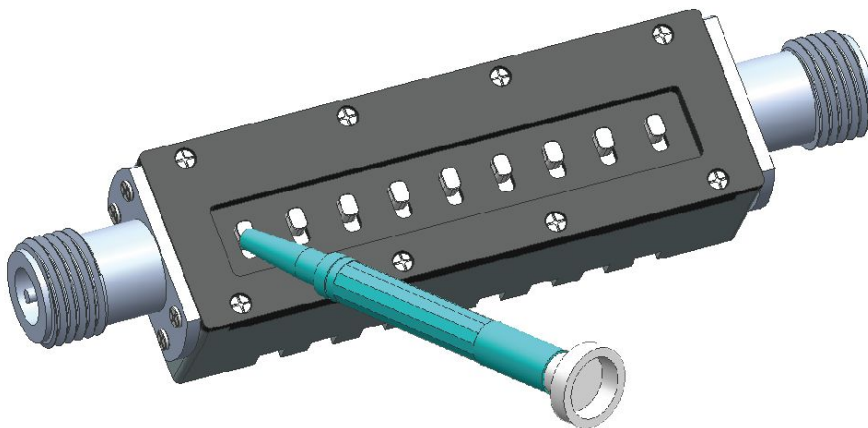Attention


It is much easier to adjust the switch by tools like plastic screw driver.


Yantel Corporation

Add: 3F, Building 3, Southern District 2 of ZhongGuan Honghualing Industrial Park, Xili, Nanshan, Shenzhen, China
 Tel: 86-755-8355-1886 Fax: 86-755-8355-2533


Mounting Instructions: Unit: mm(inch)

This product is panel-mountable via screws.


- Four mounting holes on the product plate. Refer to Fig2, Fig6.
- H represents the thickness of panel. Refer to Fig3, Fig4.
- Recommended length of the screw is 3mm+H. Refer to Fig5.

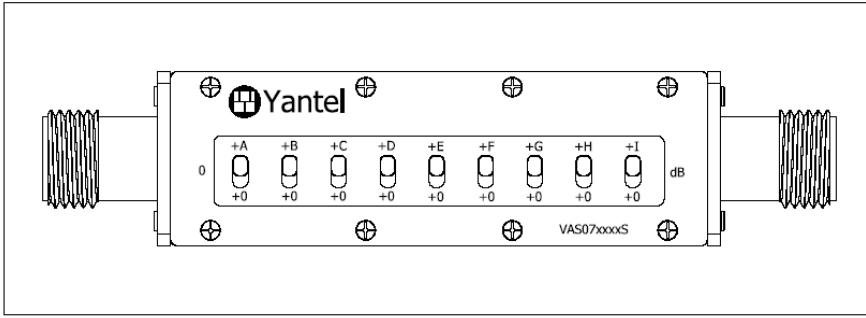


Front View Fig 2

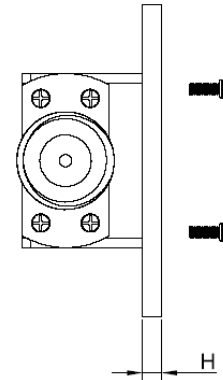


Lateral View Fig 3

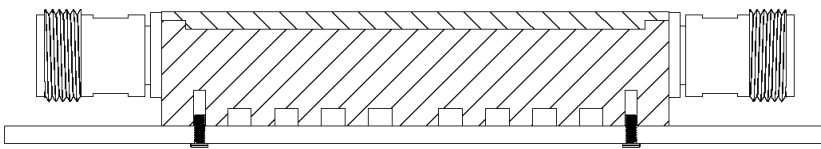


Sectional View Fig 4

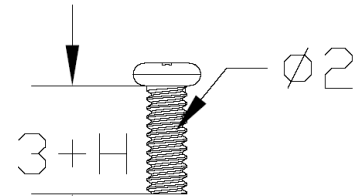

Recommended length of the screw Fig 5

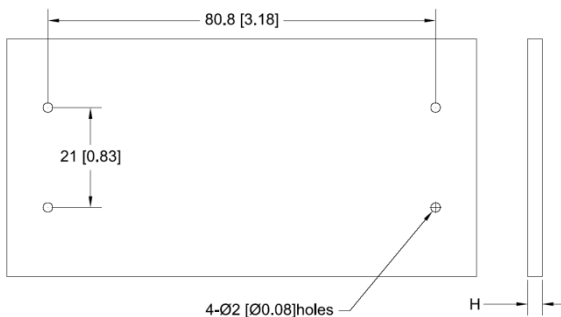

SMA

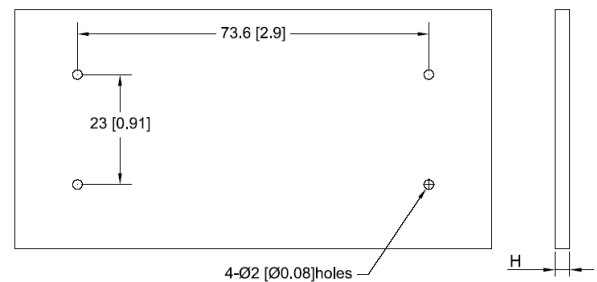

N-type

Mounting holes on user's panel Fig 6

Note:

Attempt to disassemble the product can damage it and void your warranty. In case of any malfunction, please contact your local representative, distributor or the factory immediately.